


# Applications

## Conveyor Positioning Control

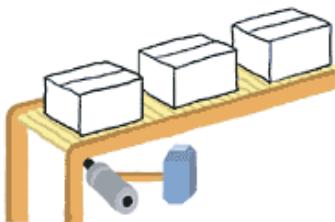


### ● Bit Logic Applications




The inverter positions products of a specified distance.

#### ■ System Configuration

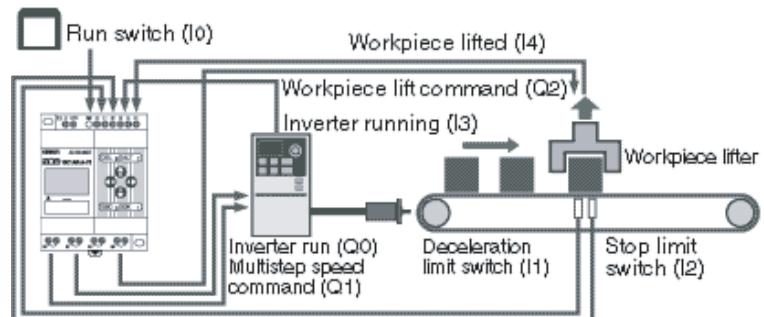

When connecting a 3G3JV or 3G3MV Inverter

- Wire inverter run (Q0) to input terminal S1 on the Inverter.
- Wire multistep speed command 1 (Q2) to input terminal S5 on the Inverter.
- Wire Inverter running (I3) to output terminal MA on the Inverter.

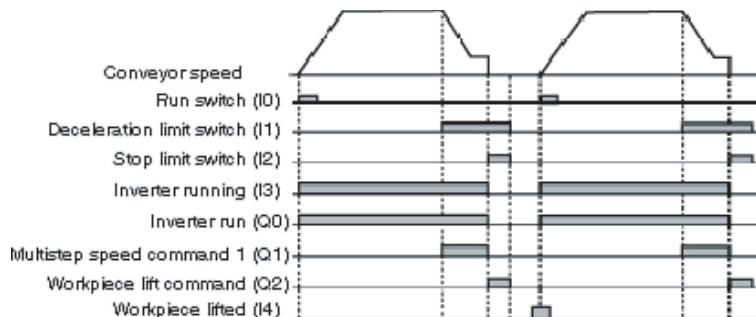

#### ■ Program Example

