

CJ-series EtherNet/IP Unit

CJ1W-EIP21S

CSM_CJ1W-EIP21S_DS_E_1_3

EtherNet/IP unit with tag data link capacity of 180,000 words or more

- EtherNet/IP is an industrial multivendor network that uses
 Ethernet. Managed by the ODVA (Open DeviceNet Vendors
 Association), it has open standards and is used with a wide
 range of industrial devices.
- The EtherNet/IP Unit supports tag data links to enable sharing data between devices at Ethernet nodes and a message service for sending and receiving data when required.
- The EtherNet/IP Unit supports the same FINS/UDP, FINS/TCP and Socket service functionality as Ethernet Units.
- Various security functions enable secure network connections.




EtherNet/IP

Features

- · Large-capacity tag data links are easily enabled by simply setting connections, with no programming required.
- Tag data links can be used to exchange data with up to 256 nodes over up to 256 connections.
- Up to 256 connections can be set per Unit with up to 722 words of data per connection, for a total of up to 184,832 words of link data. (There is no limit to the data link capacity for the overall network.)
- Data concurrency is maintained within each connection (for up to 722 words).
- Tag data link settings can be changed for individual Units even while tag data links are being used on a network.
- · Errors can be diagnosed using the Network Configurator, and system errors can be monitored with a wide array of status flags.
- A secure network connection can be realized with Secure Communications, User Authentication, Opening and Closing the port, IP Packet filtering.

System Configuration

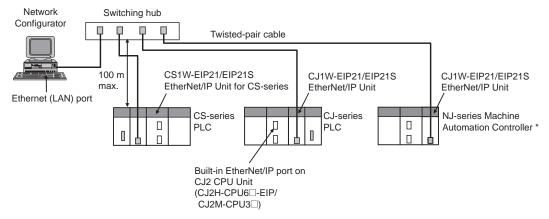

^{*} EtherNet/IP Unit with unit version 1.0 or later (Lot number 241001 or later) is required to connect CJ1W-EIP21S to NJ-series CPU Unit. For lot numbers 241001 or later, "+NJ" is printed at the lower right of the Unit's front panel.

Use NJ-series CPU Unit with version 1.67 or later and Sysmac Studio with version 1.60 or later.

Ordering Information

International Standards

- The standards are abbreviated as follows: U: UL, U1: UL (Class I Division 2 Products for Hazardous Locations), C: CSA, UC: cULus, UC1: cULus (Class I Division 2 Products for Hazardous Locations), CU: cUL, N: NK, L: Lloyd, and CE: EC Directives.
- · Contact your OMRON representative for further details and applicable conditions for these standards.
- Refer to the OMRON website (www.ia.omron.com) or ask your OMRON representative for the most recent applicable standards for each model.

EtherNet/IP Unit

| Unit | Product name | Specifications | | | No. of unit | | rent ption (A) | Model | Standards |
|---------------------|-----------------|---|--|-----------------------|----------------------|---------------|-------------------|-------------|------------------|
| type | | Communications cable | Communications functions | Units per CPU Unit | numbers allocated | 5 V system | 24 V system | Model | Standards |
| CJ1 CPU Bus Unit | | Shielded twisted-pair (STP) cable Categories: 100 Ω at 5, 5e | Tag Data Link Functions, Message Communications Functions, Socket Service Functions | 8 max. *1 | 1 | 0.65 | - | CJ1W-EIP21S | UC1, N, L, CE |

^{*1.} Up to four EtherNet/IP Units can be connected to a NJ CPU Unit. Up to seven EtherNet/IP Units can be connected to a CJ2H-CPU6□-EIP. Up to two EtherNet/IP Units can be connected to a CJ2M CPU Unit.

Industrial Switching Hubs

| Product name | Appearance | Functions | No. of ports | Accessories | Current consumption (A) | Model |
|------------------------------|------------|---|--------------|------------------------|-------------------------|----------|
| Industrial Switching Hubs | C.C. | Quality of Service (QoS): EtherNet/IP control data priority 10/100BASE-TX, Auto-Negotiation | 5 | Power supply connector | 0.07 | W4S1-05D |

Recommended Network Devices

The following table shows the devices recommended for use with the EtherNet/IP.

| Part | Manufacturer Model number | | Inquires | | | |
|----------------|-------------------------------|---------------------------|---------------------------------------|--|--|--|
| Switching Hub | Phoenix Contact | Consult the manufacturer. | Phoenix Contact USA Customer Service | | | |
| | Contec USA, Inc. | Consult the manufacturer. | CONTEC USA Inc. | | | |
| | Cisco Systems, Inc. | Consult the manufacturer. | Cisco Systems, Inc. Main Corporate HQ | | | |
| Twisted-pair | 100BASE-TX | | | | | |
| cable | EtherNet/IP compliant cable – | | | | | |
| Connectors | STP Plug | | | | | |
| (Modular plug) | Panduit Corporation | MPS588 | Panduit Corporation US Headquarters | | | |
| Boots | Tsuko Company | MK boot (IV) LB | Tsuko Company Japan Headquarters | | | |

Note: 1. Always use a switching hub when using tag data links in the network.

Note: 2. If a repeater hub is used for EtherNet/IP tag data links (cyclic communications), the network's communications load will increase, data collisions will occur frequently, and stable communications will be impossible.

Mountable Racks

| Model | NJ sy | rstem | CJ1 s | CP1H system | |
|-------------|---------------------------|----------------|--------------|------------------------------|--|
| Model | CPU Rack | Expansion Rack | CPU Rack | CPU Rack Expansion Backplane | |
| CJ1W-EIP21S | 4 Units (per CPU Unit) *1 | | 8 Units (per | 2 Units *3 | |

^{*1.} EtherNet/IP Unit with unit version 1.0 or later (Lot number 241001 or later) is required to connect CJ1W-EIP21S to NJ-series CPU Unit. "+NJ" is printed at the lower right of the Unit's front panel.

Use NJ-series CPU Unit with version 1.67 or later and Sysmac Studio with version 1.60 or later.

A CP1W-EXT01 CJ Unit Adaptor is required.

Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products. Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. EtherNet/IPTM and DeviceNetTM are trademarks of the ODVA.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

^{*2.} Up to seven EtherNet/IP Units can be connected to a CJ2H-CPU6□-EIP. Up to two EtherNet/IP Units can be connected to a CJ2M CPU Unit.

^{*3.} EtherNet/IP Unit with unit version 1.0 or later (Lot number 250401 or later) is required to connect CJ1W-EIP21S to CP1H-series CPU Unit. "+CJ/CP/NJ" is printed at the lower right of the Unit's front panel.

EtherNet/IP Units Specifications

| | Item | Specifications | | | | |
|-------------------------------------|-------------------------------|---|--|--|--|--|
| Model number | | CJ1W-EIP21S | | | | |
| Туре | | 100Base-TX *1 | | | | |
| Applicable PLCs | | NJ-series, CJ (CJ1, CJ2) series, and CP1H *2 | | | | |
| Unit classification | on | CJ-series CPU Bus Unit | | | | |
| Mounting location | on | CPU Rack or Expansion Rack | | | | |
| Number of Units | s that can be mounted *2 | NJ-series System: 4 max. (including Expansion Racks) CJ series System: 8 max. (including Expansion Racks) *3 CP1H System: 2 max. | | | | |
| | Allocated CIO Area words | 25 words/Unit (one unit number's words) | | | | |
| | (CPU Bus Unit words) | These words contain control bits and flags, the target node PLC's operating and error information, Unit status, communications status, registered/normal target node information, and FINS/TCP connection status. | | | | |
| | Allocated DM Area words | 100 words/Unit (one unit number's words) | | | | |
| CPU Unit words used | (CPU Bus Unit words) | These words contain the IP address display/setting area. | | | | |
| | User-set area | Any usable data area words | | | | |
| | User-set area | Target node PLC's operating and error information, and registered/normal target node information | | | | |
| | CPU Bus Unit System Setup | Not used. | | | | |
| Non-volatile me Unit (See note.) | mory within EtherNet/IP | The following settings are stored in the EtherNet/IP Unit's non-volatile memory. Note: Unlike the regular Ethernet Units, the CPU Bus Unit Setup Area in the CPU Unit is not used for these settings. 1. Unit Setup (communications settings for the EtherNet/IP Unit, such as the IP address, DNS server settings, host name, baud rate, FINS/UDP settings, and FINS/TCP settings) 2. Tag data link settings (device parameters) 3. User authentication settings 4. Operation log | | | | |
| | Media access method | CSMA/CD | | | | |
| | Modulation method | Baseband | | | | |
| | Transmission paths | Star form | | | | |
| Transfer | Baud rate | 100 Mbit/s (100Base-TX) | | | | |
| specifications | Transmission media | Shielded twisted-pair (STP) cable Categories: 100 Ω at 5, 5e | | | | |
| | Transmission distance | 100 m (distance between hub and node) | | | | |
| | Number of cascade connections | There is no limitation when a switching hub is used. | | | | |
| Current consumption (Unit) | | 650 mA max. at 5 V DC | | | | |
| Weight | | 91 g max. | | | | |
| Dimensions | | $31 \times 90 \times 65 \text{ mm } (W \times H \times D)$ | | | | |
| Other general specifications | | Other specifications conform to the general specifications of the CJ-series. | | | | |

^{*1.} If tag data links are being used, use 100Base-TX. Otherwise, 10Base-T can be used, but this is not recommended.

*2. For the CJ1W-EIP21S, the following CPU Units are supported.

NJ 01- 01 01, CJ2H-CPU 02, CJ2H-CPU 04, CJ2H-CPU 05, CJ2H-CPU 06, CJ2H-CPU 07, CJ2H

EtherNet/IP Unit with unit version 1.0 or later (Lot number 241001 or later) is required to connect CJ1W-EIP21S to NJ-series CPU Unit. Use NJ-series CPU Unit. with version 1.67 or later and Sysmac Studio with version 1.60 or later.

★3. Up to seven EtherNet/IP Units can be connected to a CJ2H-CPU6□-EIP. Up to two EtherNet/IP Units can be connected to a CJ2M CPU Unit.

Communications Specifications

| | | | Specifications | | | | | | |
|----------|-------------------------|--|--|--|--|--|--|--|--|
| | Item | | NJ | CJ2 | CJ1 | | | | |
| | | Number of connections | 256 | | | | | | |
| | | Packet interval (refresh cycle) | 0.5 to 10,000 ms (in 0.5-ms units) Can be set independently for each connection. (Data is refreshed over the network at the preset interval and does not depend on the number of nodes.) | | | | | | |
| | | Allowed communications bandwidth per Unit | 6,000 to 12,000 pps * 1 | 5,000 to 12,000 pps * 1 | | | | | |
| | | Number of tag sets | 256 | | | | | | |
| | | Tag types | CIO Area, DM Area, EM Area, Holdin | g Area, Work Area, and network symb | ools *2 | | | | |
| | | Number of tags per connection (= 1 tag set) | 8 (7 tags when the tag set contains the | 3 (7 tags when the tag set contains the controller status) | | | | | |
| | | Maximum link data size per node (total size of all tags) | 184,832 words | | | | | | |
| | Tag data links | Maximum data size per connection | | 504 bytes (252 words) or 1444 bytes (722 words) *3 Data synchronicity is maintained within each connection. | | | | | |
| | (Cyclic communications) | Number of registrable tag sets | 256 (1 connection = 1 tag set) | | | | | | |
| | | Maximum size of 1 tag set | 722 words (The controller status uses 1 word when the tag set contains the PLC status.) | | | | | | |
| | | Maximum number of tags that can be refreshed per CPU Unit cycle *4 | Output/Transmission (CPU to EtherN Input/Reception (EtherNet/IP to CPU | | Output/Transmission (CPU to EtherNet/IP): 19 Input/Reception (EtherNet/IP to CPU): 20 *5 | | | | |
| | | Data that can be refreshed per CPU Unit cycle *5 The layout of the allocated CIO Area words is the defauly. *6 | Output/Transmission (CPU to EtherNet/IP): 6,432 words Input/Reception (EtherNet/IP to CPU): 6,432 words | | Output/Transmission (CPU to EtherNet/IP): 7,469 words Input/Reception (EtherNet/IP to CPU): 7,469 words | | | | |
| | | Changing tag data link parameters during operation | Supported *7 | | | | | | |
| | | Multicast packet filter function *8 | Supported | | | | | | |
| | | Class 3 (connected) | Number of connections: 128 | | | | | | |
| | Explicit messaging | UCMM (unconnected) | Number of clients that can communic Number of servers that can communi | | | | | | |
| | | CIP routing *9 | Supported CJ1W-EIP21/EIP21S, CS1W-EIP21/I | EIP21S, NJ-501-□□□□, NJ-301-□□□ | □, CJ2H-CPU□□-EIP, CJ2M-CPU3□ | | | | |
| EINIS on | ervice *10 | FINS/UDP | Not supported | Supported | | | | | |
| TINO SE | i vice o iu | FINS/TCP | Not supported 16 connections max. | | | | | | |
| ONIES | | Agent | SNMPv1, SNMPv2c, SNMP trap | | | | | | |
| SNMP | | MIB | MIB-II | | | | | | |
| EtherNe | et/IP conformance | etest | CT17 | | | | | | |
| Etherne | et interface | | 10BASE-T or 100BASE-TX Auto Negotiation or fixed settings | | | | | | |

^{*1.} In this case, pps means "packets per second" and indicates the number of packets that can be processed in one second.

^{*5.} If status layout is set to user settings, the maximum number of tags is as follows.

| Output/Transmission | Input/ Reception |
|---------------------|------------------|
| 18 | 18 |

***6.** The table below shows value when the layout type is User defined.

| | | When connected to CJ1 CPU Unit | When connected to CJ2 CPU Unit |
|--|---------------------|--------------------------------|--------------------------------|
| Data (words) that can be refleshed per | Output/Transmission | 7321 | 6172 |
| CPU Unit cycle | Input/Reception | 7385 | 6236 |

^{*7.} If parameters are changed in the EtherNet/IP Unit, however, the EtherNet/IP Unit will be restarted. When other nodes are communicating with the affected node, the communications will temporarily time out and automatically recover later.

^{*2.} Network symbols can be used for the following CPU Units.
NJ501-□□□/NJ301-□□□/CJ2H-CPU6□-EIP/CJ2M-CPU3□/CJ2H-CPU6□ withe unit version 1.6 or later/CJ2M-CPU1□ with unit version 2.2 or later
*3. To use 505 to 1,444 bytes as the data size, the system must support the Large Forward Open standard (an optional CIP specification). The CS/CJ-series Units support this standard, but before connecting to nodes of other companies, confirm that those devices also support it.
*4. If the maximum data size is exceeded, the data refreshing with the CPU Unit will extend over two or more cycles.

^{*8.} Because the EtherNet/IP Unit is equipped with an IGMP client, unnecessary multicast packets can be filtered by using a switching hub that supports IGMP snooping.

^{*9.} EtherNet/IP Unit with unit version 1.0 or later (Lot number 241001□ or later) is required to connect CJ1W-EIP21S to NJ-series CPU Unit. Use NJ-series CPU Unit with version 1.67 or later and Sysmac Studio with version 1.60 or later.

***10.** The EtherNet/IP Unit uses the TCP/UDP port numbers shown in the following table.

| Service | Protocol | | Port r | number | Remarks | | |
|---------------------|---------------|-----|---------|--------|---------------------------|--|--|
| Service | CJ1/CJ2 | NJ | CJ1/CJ2 | NJ | CJ1/CJ2 | NJ | |
| Tag data links | UDP | | 2222 | | | | |
| Class3, UCMM | TCP/UDP | | 44818 | | 1 | | |
| DNS | UDP | | 53 | | The port number is fixed. | | |
| BOOTP client | | UDP | | 68 | 1 | | |
| Secure Comm | TCP | | 443 | | The port number is fixed. | | |
| FINS/UDP service | UDP | | 9600 | | | Dord words one in the | |
| FINS/TCP service | TCP | | 9600 | | Port numbers in the | | |
| FTP | P TCP | | 20, 21 | | Unit Setup can be | Port numbers in the Unit Setup can be | |
| SNTP | ITP UDP | | 123 | | changed with the | changed with the | |
| SNMP | IP UDP | | 161 | | CX-Programmer. | Sysmac Studio. | |
| SNMP trap | UDP | | 162 | | | | |

Unit Versions and Software Versions

The following versions of the Sysmac Studio, CX-Programmer and Network Configurator are required to set EtherNet/IP Units.

Yes:Supported, ---: Not supported

| CJ1W-EIP21S | Sysmac Studio *1 | | CX-Programmer *2 | | Network Configurator for EtherNet/IP | | EIP21S User Management Tool |
|-------------|----------------------|-----------------------|----------------------|-----------------------|---|------------------------|-----------------------------|
| | Ver.1.59 or lower | Ver.1.60 or higher | Ver.9.80 or lower | Ver.9.81 or higher | Ver.3.72 or lower | Ver.3.74a or higher | Ver.1.00 or higher |
| Ver.1.0 | | Yes *3 | | Yes | | Yes | Yes |

^{*1.} Available only when connecting with NJ-series CPU Units.

Network Configurator Requirements


The Network Configurator is a software package designed for building, setting, and controlling a multi-vendor EtherNet/IP Network using OMRON's EtherNet/IP. It is included in CX-One version 3.0. The Network Configurator provides the following functions for building, setting, and controlling EtherNet/IP.

| | Item | Specification | | | | | |
|------------------------|-------------------------------|--|--|---------------------|--|--|--|
| System Requ | uirements | Refer to the CX-One Catalog (Cat. No. R134), visit your local OMRON website. | | | | | |
| | | CS1/CJ1 | CJ2 | NJ | | | |
| Network connection | Serial interface | CPU Unit's Peripheral or RS-232C port | CPU Unit's USB or RS-232C port | CPU Unit's USB port | | | |
| method | Ethernet interface | EtherNet/IP Unit's Ethernet port | CPU Unit's Ethernet port EtherNet/IP Unit's Ethernet port | | | | |
| Location on | Network | A single node address is used (only when directly connected to EtherNet/IP). | | | | | |
| Number of U Network | nits that can be connected to | A single Network Configurator per Network (More than one Configurator cannot be used in the same system.) | | | | | |
| Main functions | Network control functions | The Network configuration can be created and edited regardless of whether the Network Configurator is online or offline. The Network configuration can be read from a file or the network. | | | | | |
| | Configuration functions | The EDS files used by the Network Configurator can be installed and deleted. | | | | | |
| Supported file formats | | Configurator network configuration files (*.ncf) Configuration files (*.ncf) created using the Network Configurator for EtherNet/IP (version 2) can be imported by selecting <i>External Data - Import</i> from the File Menu. | | | | | |

^{*2.} Available only when connecting with CJ1/CJ2-series CPU Units.
*3. Supported by unit version 1.0 or later (Lot number 241001□ or later).

External Interface

CJ1W-EIP21S

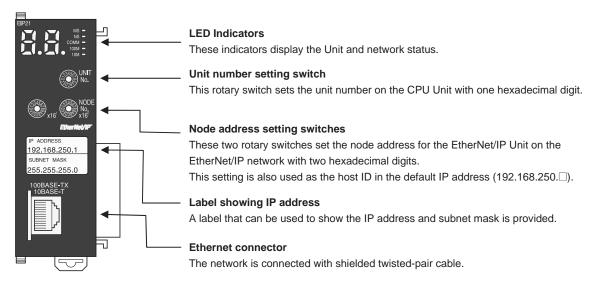

Ethernet Connectors

The following standards and specifications apply to the connectors for the Ethernet twisted-pair cable.

• Electrical specifications: Conforming to IEEE802.3 standards.

Connector structure: RJ45 8-pin Modular Connector
 (2005)
 (2005)
 (2005)
 (2005)
 (2005)
 (2005)
 (2005)
 (2005)
 (2005)
 (2005)
 (2005)
 (2005)
 (2005)
 (2005)
 (2005)

(conforming to ISO 8877)



| Connector pin | Signal name | Abbr. | Signal direction |
|---------------|---------------------|-------|------------------|
| 1 | Transmission data + | TD+ | Output |
| 2 | Transmission data – | TD- | Output |
| 3 | Reception data + | RD+ | Input |
| 4 | Not used. | _ | - |
| 5 | Not used. | - | - |
| 6 | Reception data – | RD- | Input |
| 7 | Not used. | - | - |
| 8 | Not used. | - | - |
| Hood | Frame ground | FG | - |

Functional Comparsion of EtherNet/IP Functionality

Yes: Supported, No: Not supported


| Item | CJ1W-EIP21S EtherNet/IP Unit | Built-in EtherNet/IP port on NJ-series CPU Unit | CJ-series Ethernet Unit |
|---|------------------------------|--|-------------------------|
| Tag data link communications service | Yes | Yes | No |
| CIP message communications service | Yes | Yes | No |
| FINS/UDP service | Yes | Yes | Yes |
| FINS/TCP service | Yes | Yes | Yes |
| Socket service | Yes | Yes | Yes |
| File transfer (FTP) | Yes | Yes | Yes |
| fail send/receive | No | No | Yes |
| Veb functions | No | No | Yes |
| Automatic adjustment of PLC/Controller's internal clock | Yes | Yes | Yes |
| Simple backup function | Yes | No | Yes |
| Error history | Yes | Yes *1 | Yes |
| Response to PING command | Yes | Yes | Yes |
| SNMP/SNMP trap | Yes | Yes | No |
| CIDR function for IP addresses | Yes | Yes | Yes *2 |
| Online connection by EtherNet/IP using CX-One | Yes | No | No |
| Online connection by Ethernet (FINS) using CX-One | Yes | No | Yes |
| Online connection by EtherNet/IP using Network Configurator | Yes | Yes | No |
| Mounting in a Controller with an NJ series CPU Unit | Yes *3 *4 | No | No |
| Secure communications | Yes | No | No |
| Jser authentication | Yes | No | No |
| Openiing and closing the port | Yes | No | No |
| P packet filtering | Yes | No | No |
| Operation log | Yes | No | No |


^{*1.} This is equivalent to the event log of the built-in EtherNet/IP port of an NJ-series Controller.

Dimensions (Unit: mm)

CJ1W-EIP21S



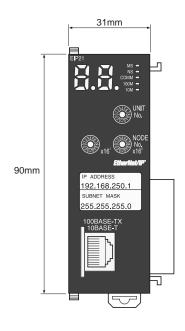

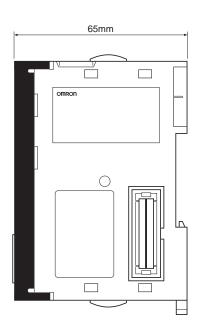

^{*2.} This function supported by unit version 1.5 or later.
*3. You cannot use the following functions if you connect to the CPU Unit through an EtherNet/IP Unit.
Going online with a CPU Unit from the Sysmac Studio. (However, you can go online from the Network Configurator.)
*4. The function supported by unit version 1.0 or later (Lot number 241001□ or later).

Related Manuals

| Manual number | Model | Name | Contents |
|------------------|--|---|--|
| W465 | CS1W-EIP21 CJ1W-EIP21 CJ2H-CPU□□-EIP CJ2M-CPU3□ CS1W-EIP21S CJ1W-EIP21S | EtherNet/IP Units Operation Manual | Provides information on operating and installing EtherNet/IP Units, including details on basic settings, tag data links, and FINS communications. Refer to the <i>Communications Commands Reference Manual</i> (W342) for details on FINS commands that can be sent to CS-series and CJ-series CPU Units when using the FINS communications service. Refer to the <i>Ethernet Units Operation Manual Construction of Applications</i> (W421) for details on constructing host applications that use FINS communications. |
| W495 | CJ1W-EIP21 CJ1W-EIP21S | CJ-series EtherNet/IP Units Operation Manual for NJ-series CPU Unit | Information on using an EtherNet/IP Unit that is connected to an NJ-series CPU Unit is provided. Information is provided on the basic setup, tag data links, and other features. Use this manual together with the NJ-series CPU Unit Hardware User's Manual (Cat. No. W500) and NJ-series CPU Unit Software User's Manual (Cat. No. W501). |
| W421 | CS1W-ETN21 CJ1W-ETN21 | Ethernet Units Operation Manual Construction of Applications | Provides information on constructing host applications for 100Base-TX Ethernet Units, including functions for sending/receiving mail, socket service, automatic clock adjustment, FTP server functions, and FINS communications. |
| W342 | CS1G/H-CPU H CS1G/H-CPU-V1 CS1W-SCU21 CS1W-SCB21/41 CJ1G/H-CPU-H CJ1G-CPU-CJ1W-SCU41 | Communications Commands Reference Manual | Describes the C-series (Host Link) and FINS communications commands used when sending communications commands to CS-series and CJ-series CPU Units. |
| W463 | CXONE-AL□□D-V□ | CX-One Setup Manual | Describes the setup procedures for the CX-One. Information is also provided on the operating environment for the CX-One. |

9

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warrantv.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.
Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

2025.11

In the interest of product improvement, specifications are subject to change without notice.